





AGE 14+

EP RACING BOAT




Item Number: 7000

1. BATTERY INSTALLATION

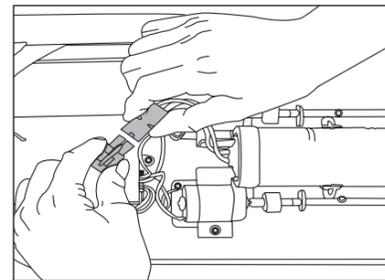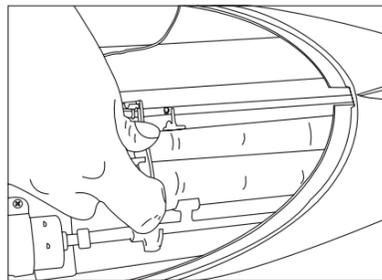


- (1). Put the Ni-Cad battery into the main hull of the boat and secure it into the battery casing inside. Make sure that it can not move around.
- (2). Connect the battery to the plug in the boat hull.

2. HULL COVER INSTALLATION

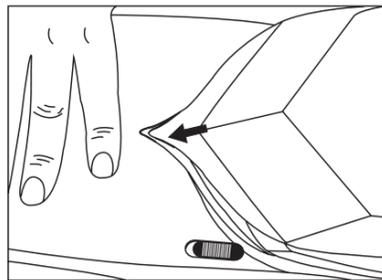

- (3). Place the top cover back on the boat, by first pushing the cover into the front of the boat and then placing the cover on the boat. Secure into place by turning the locking fastener on the end of the boat.


3. TURNING ON AND OFF

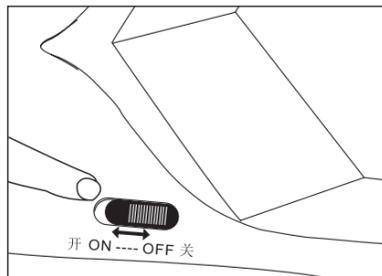

- (4). Turn on the remote control and then turn the boat switch "ON". Once you do this keep all body parts away from the propellor to prevent any injury.

CAUTION:
Do not use this product for longer than 15 minutes. You must allow the motors and battery to cool down before you use it again.


4. CHARGING

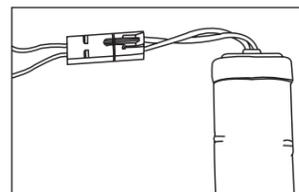

- (5). Only use the charger that comes with this boat. Make sure the voltage matches that on the power supply. The charger will take 5 hours to charge the battery to full from empty.


CAUTION: Make sure you fully discharge the battery before you recharge it to extend the life of the battery.

5. INSTALLING THE ANTENNA


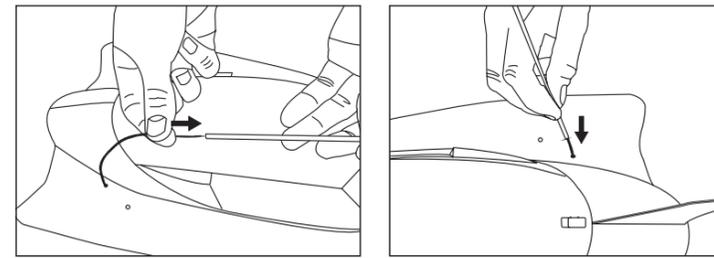


- (6). Push the antenna through the plastic tube. Then push the plastic tube into the socket on the boat hull.


6. OPERATING

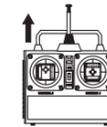


ROTATING ROTATING

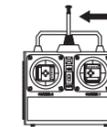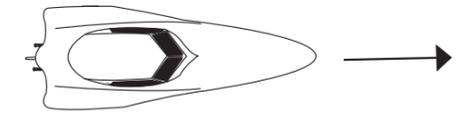

STOP-ROTATING ROTATING

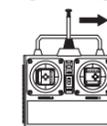

ROTATING STOP-ROTATING

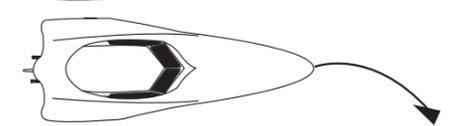

- (7). -Push the left throttle stick forward on the remote control. The two propellers will rotate and the boat will move forward.
-Push the right direction stick on the remote control to the right and the left motor will work and the right motor will stop and the boat will move right.
-Push the right direction stick on the remote control to the left and the right motor will work and the left motor will stop and the boat will move left.
 - (8). To launch the boat, place gently in the water. Make sure that there is nobody else using the same frequency as you nearby.
- Note: ①. This product is for 14 years +, adult supervision is needed at all times.
②. Do not use this boat in an area where people are swimming.
③. Make sure that there is nothing in the water for the propellers to get stuck on.
- (9). If you do not use this boat for a long length of time. take out the propellor shafts and then oil them before use.
 - (10). The maximum range of the boat is 40m do not go out of range.
 - (11). Avoid leaving the boat in direct sunlight, clean the boat after use with gentle detergent and water only.

7. NOTE

1. This boat has a safety mechanism which stops the propellers from rotating out of the water.
3. Please submerge the boat propellers into water in order for them to work.
2. If you need any parts contact your local dealer or Flying Gadgets Ltd (Tel: +44 (0) 208 952 0471)

